

# SUPPLEMENTARY INSTRUCTION FOR INSTALLING AND REGULATING TELEPHONE BOOTH CLOSERS

## MOUNTING FOR PUSH AND PULL SIDE

Follow steps 1 through 9 (excluding latch speed adjustment and spring power adjustment) for 4010/4110 instruction sheet.

\*\*\*\*\*

### OPERATION:

1. For purposes of indicating that the booth is not occupied closer is factory set to leave door ajar.
2. Door must be closed manually from ajar position.

### SPRING ADJUSTMENT:


1. See Fig. 1 for adjustment details. The spring adjustment will determine how far the door remains open in the ajar position. Adjustments should be made with door partially open, using channel locks or wide pliers.

### NOTE:

Main swing must be adjusted for slow operation, otherwise momentum of door may cause it to close.

**Fig. 1**

INCREASE DOOR TO JAMB DISTANCE

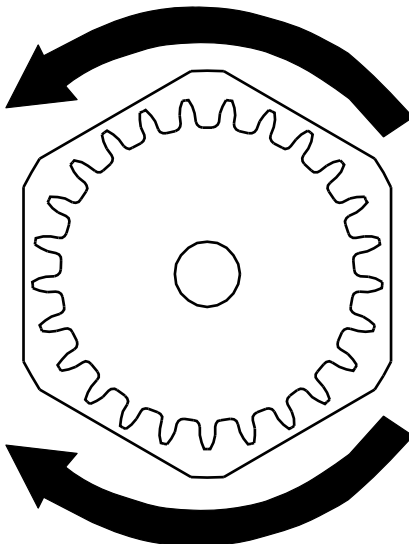

DECREASE DOOR TO JAMB DISTANCE