

## 334 Concealed Switch Endcap Retro Fit



- 1a Turn power off.
- 1b Use 3/32 Allen wrench to remove operator cover.
- 1c Disconnect the 120V power connector from the printed circuit board.
- 1d Unplug the 334 end cap power and hold open switches from printed circuit board.
- 1e Loosen the screws a few turns that hold the 334 end cap to the mounting channel. Don't remove the screws.
- 1f Remove the 334 end cap.
- 1g Plug the 334CS end cap power switch into the three pin connector on the power input circuit board.
- 1h Place the 334CS end cap into position under the two mounting channel screws and tighten.
- 1i Make sure the 334CS power switch is on.
- 1j Reconnect the 120V power connector to the printed circuit board. Make sure the operator is functional.
- 1k Reattach operator cover.
- 11 Turn power on.

1-877-671-7011





