

5030 Series



Installation Instructions

A CAUTION A

Improper installation or regulation may result in personal injury or property damage. Follow all instructions carefully.

For questions contact LCN Closers:

1-877-671-7011

1 Installation

1a Closer Handing

Make sure hand of closer and door correspond. Hand of closer is stamped on mounting plate. Hand of closer can not be changed.

1b Door and Frame Preparation

Determine if door is to be hung on hinges, offset pivots to center pivots. If frame is not prepared for closer, prepare to dimensions shown on proper template. Note: On butt hinge applications, closer can be templated for 100° or 180° of opening.

1c Install Closer onto Door

Install closer in prepared frame with fasteners provided. Be sure mounting plate is flush with soffit. Install head stop.

1d Install Door and Closer onto Frame

Hang door. Be sure there is no bind or friction. Place main arm on shaft and push up into position. Insert arm screw and tighten securely. Close door and install shoe. Open door slightly and insert rod in forearm. Close door. Starting with main arm at right angle to door, move arm toward latch until holes in rod and tube line up. Insert and tighten screw.

2 Regulation and Backcheck

 
Door closer regulation is preset at the factory. Adjust as follows only if necessary: A "normal" closing time from a 90° open position is 5 to 7 seconds, evenly divided between main speed and latch speed (see figure below). Use a 3/32" hex wrench to adjust regulating screws. To slow main speed of door, turn middle regulating screw clockwise. To slow latch speed, turn regulating screw closet to hinge clockwise.

BACKCHECK: To increase backcheck intensity, turn regulating screw screw closest to the latch clockwise.

DO NOT USE ABRUPT BACKCHECK. DO NOT USE DOOR CLOSER AS A DOOR STOP.


3 Adjusting the Arm

To adjust 90° hold-open arm (up to 100° opening). The hold open features is at the elbow. Arm is preset to hold door open at approximately 90°. To change setting, loosen adjusting nut, open door to desired hold open position, tighten adjusting nut.




4 Closing Power


Adjust CLOSING POWER only if more power is needed. Closer is shipped with minimum closing power pre-set. To increase CLOSING POWER turn spring adjusting screw clockwise. Maximum adjustment 36 turns.

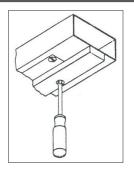

To adjust for additional closing power at latch. (Regular & 90° H.O. only)

 
- 1. Remove screw "Y" (step 1d) and separate rod from tube.
- 2. Remove shoe screws and turn shoe over.
- Reassemble arm.




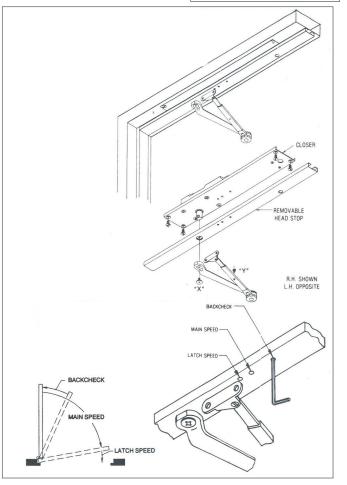






© Allegion 2015 Printed in U.S.A. 14126 Rev. 06/15-g

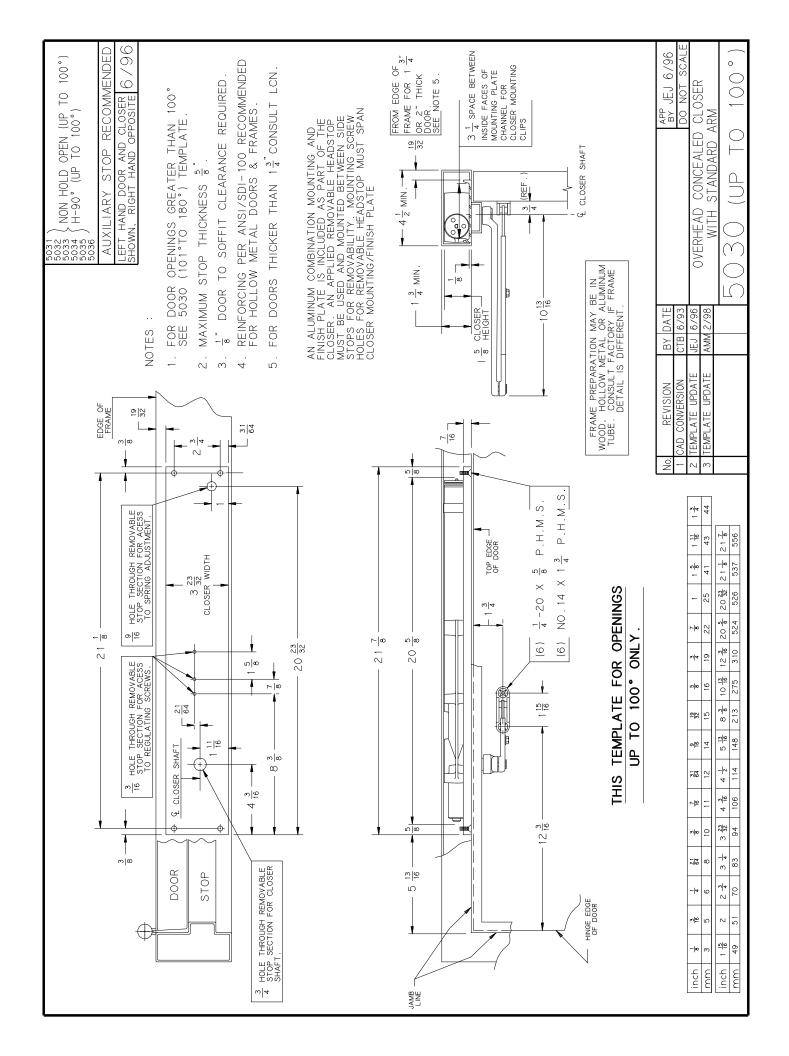

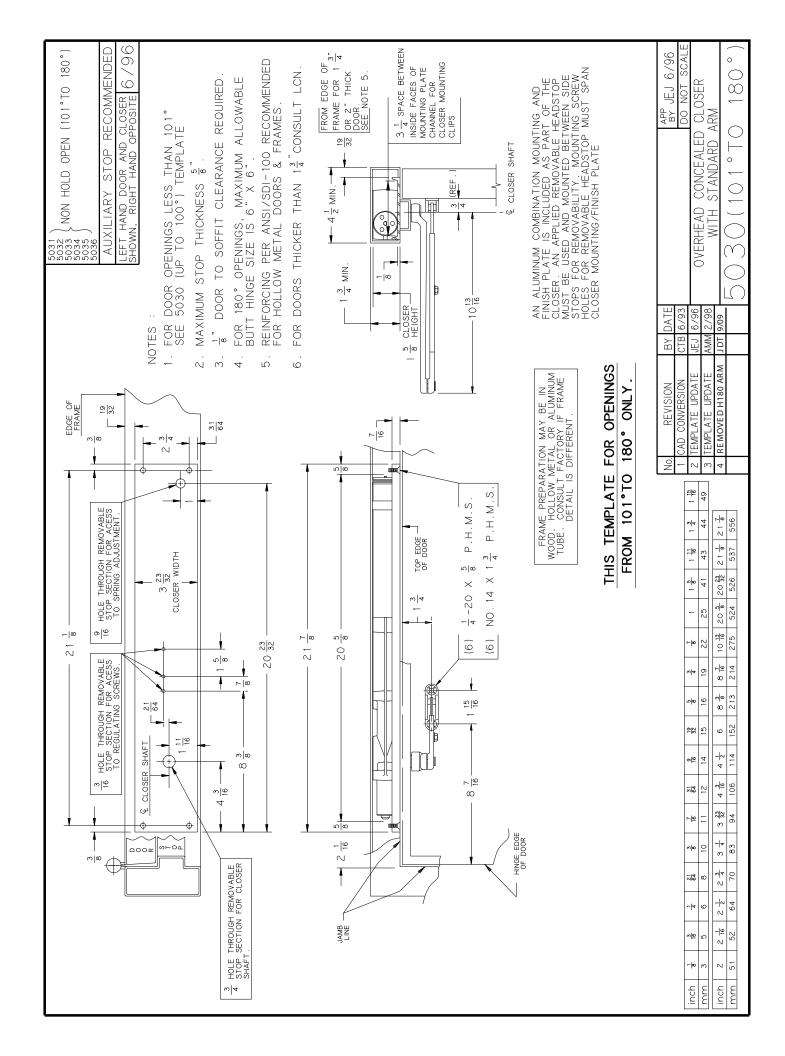

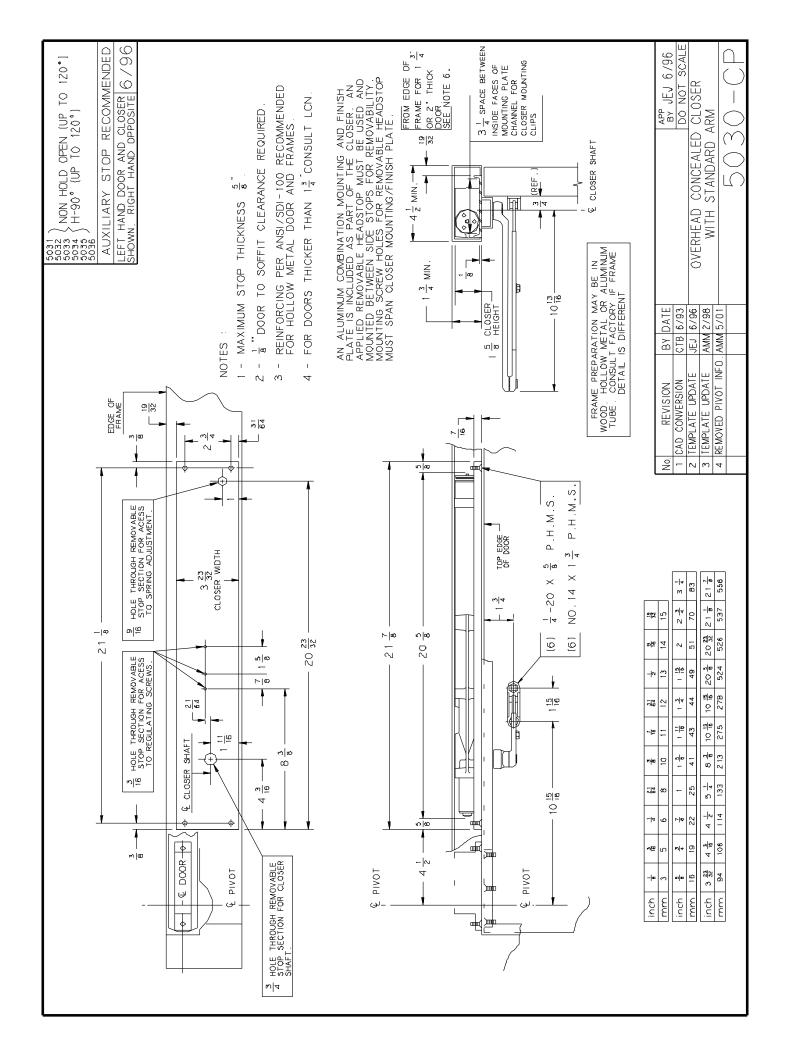

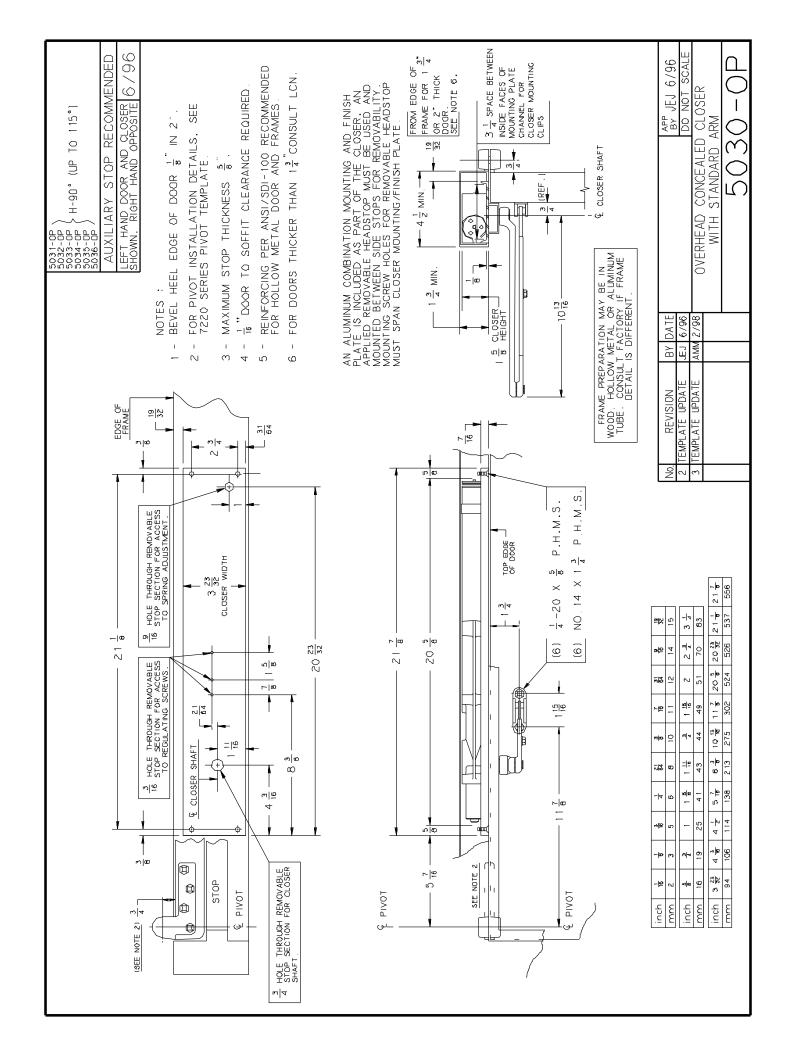

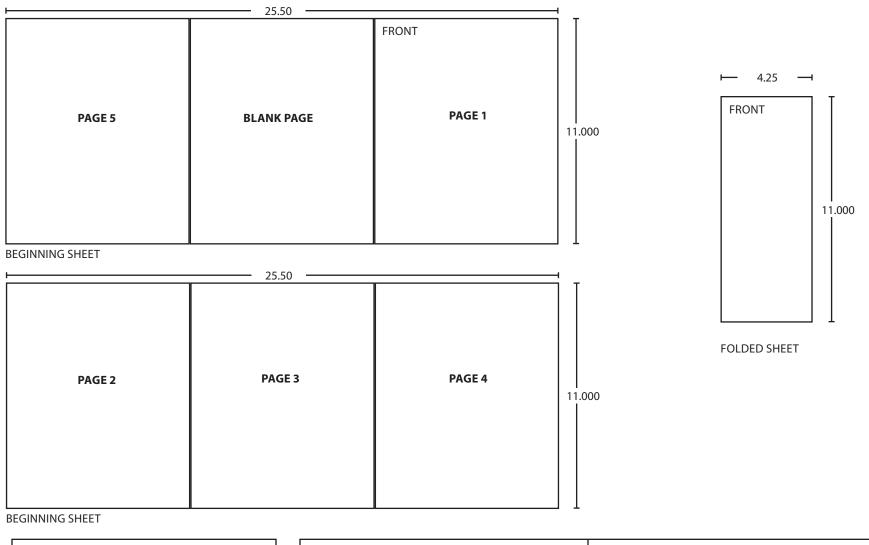

Additional Notes:			Revision	n History			Revision Description:			
1. None	F	F G H			K	L	G > Revised artwork			
	043228									
	Material	Material White Paper					Edited By	Approved By	EC Number	Release Date
							J. Ellis	M. Roberts		06-10-15
	Notes	Notes 1. printed two sides 2. printed black 3. tolerance ± .13 4. printed in country may vary 5. drawings not to scale					Title			
							5030 Series Instruction Sheet			
	3. tolerar						Creation Date 05-10-10	Number Revi		Revision
								14126		G
	J. didwii						Created By N/A	Activity 3899 Hancock Expwy		
							Software: InDesign CS6	Security, CO 80911	(© Allegion 2015